

#### OPERATING INSTRUCTIONS

Pry open the case (with a coin) and insert battery. Close compartment. Put power switch to "on" position, and the red number display will light up. (If the numbers ever fail to light up or are dim, and the battery has been properly connected and inserted, it means the battery is weak, and should be replaced. A 9 volt alkaline battery is recommended.)

"C" is the clearing or erasing key

"E" on display means that more than 6 digits have been entered, and cannot be used. Touch "C" and begin again.

#### CALCULATIONS

All four functions of addition (+), subtraction (—), multiplication (×) and division (÷) are performed in the same basic way . . . by touching the numbers, with the plus (+) key touched between the numbers to be added, subtracted, multiplied or divided . . . then touch the function key at the end. This takes the place of an "equal" sign to produce the desired result (see illustrations on back of calculator.)

#### EXAMPLES

ADD (5 + 3)

Touch (C) (5) (+) (3) (+)  
("8" will appear)

SUBTRACT (7 - 2)

Touch (C) (7) (+) (2) (-)  
("5" will appear)

MULTIPLY (3 × 2)

Touch (C) (3) (+) (2) (×)  
("6" will appear)

DIVIDE (8 ÷ 2)

Touch (C) (8) (+) (2) (÷)  
("4" will appear)

Divides to the nearest whole number.

Note: No matter what function you wish to perform, always clear (C) the machine first; input the numbers with plusses (+) in between; then touch the desired function key (+, -, ×, ÷) at the end. Try it . . . it works..

#### MIXED CALCULATIONS

(5 + 3 ÷ 2 × 7)

Touch (C) (5) (+) (3) (+)  
(2) (÷) (7) (×) ("28" will appear)